

G'zOne

Setting Guide

Please read this first

Thank you for purchasing a G'zOne TYPE-L (hereinafter "G'zOne" or the "product"). This guide covers settings for using your G'zOne and notes on use. For explanations of the individual functions, refer to the "Instruction Manual" app (in Japanese).

- Basic Operations
- Initial Settings
- Settings for Protection in Case of Loss
- Wi-Fi® Settings
- E-mail Settings
- Making Calls
- Receiving Calls
- Backing Up E-mail
- Importing/Exporting Contacts
- Infrared Communications
- Saving Battery Power

Google, the Google logo, Android, Google Play, the Google Play logo, Gmail, the Gmail logo, Google Maps, the Google Maps logo, the Google Voice Search logo, Google+, the Google+ logo, Google Talk are trademarks or registered trademarks of Google Inc. Wi-Fi®, Wi-Fi logo, Wi-Fi CERTIFIED logo, and Wi-Fi Protected Setup logo are registered trademarks of Wi-Fi Alliance. Wi-Fi CERTIFIED™, Wi-Fi Protected Setup™, WPA™ and WPA2™ are trademarks of Wi-Fi Alliance. AOST™ is a trademark of BUFFALO Inc. "らくらく無線スタート" is a registered trademark of NEC AccessTechnica, Ltd. Facebook® is a registered trademark of Facebook, Inc. "GREE" is a registered trademark or trademark of Gree, Inc. in Japan. Copyright © 2010-2011 Three Laws of Mobility. All Rights Reserved. Bluetooth and the Bluetooth logo are registered trademarks of Bluetooth SIG, Inc. NEC CASIO Mobile Communications, Ltd. is granted a license for their use from Bluetooth SIG, Inc. Other trademarks and names belong to their respective owners. "ATOK" is a registered trademark of JustSystems Corporation. Microsoft® Exchange ActiveSync® is a trademark or registered trademark of Microsoft Corporation in the United States and/or other countries. G'zOne is a trademark of Casio Computer Co., Ltd. The product includes pictograms licensed by NTT DOCOMO, INC. This product uses "FontAvenue" of NEC Corporation. Other company names or product names are registered trademarks or trademarks of those companies.

September 2012, 1st Edition
Sales: KDDI CORPORATION -
OKINAWA CELLULAR TELEPHONE COMPANY
Manufactured by: CASIO COMPUTER CO., LTD.

Basic Operations

For detailed operating instructions, refer to the "Instruction Manual" app (in Japanese).

Power key
To turn power on
Press and hold [Power] for 5 sec. or longer.
To unlock screen
Press [Power], and then tap [Power] twice to unlock.

Menu key
Tap to display the options menu.

Home key
Tap to return to the home screen.

Back key
Tap to return to the previous screen.

Apps button
Tap to display the APPS tray or WIDGET tray.

Display
Touch the display with your finger to make operations.

Tap
Touch the display lightly, then release immediately.

Drag
While touching the display lightly, slide your finger to the desired position.

Flick
Swipe the display left, right, up, or down with your finger.

Inputting text
You can input text by repeatedly tapping keys.

Numeric keypad input
Repeatedly tap keys assigned with the character you wish to input until the desired character displays.

Character type switching key
Tap to change the type of characters input by keypad operations.

Initial Settings

The initial settings screen is displayed automatically the first time you turn on the product after purchasing.

STEP 1: Setting the language

1 ようこそ
Select language
日本語
English
Tap [次へ] (Next).

2 Initial Settings
Settings are the following:
• Setting Google Account
• Setting Google Latitude
• au Easy Setting
Tap [Next].

The [Home] key is disabled during initial settings. You cannot display the home screen until initial settings are complete.

STEP 2: Google™ account settings

Setting up a Google account allows you to use Google apps such as Gmail™, Google Play™, and Google Talk™. The main settings are as follows. (Additionally, you need to set your first name, last name, and a security question/answer to use if you forget your password. Leave the recovery e-mail address field blank if you do not have another e-mail address.)

User name Register a string of text to use for your Google account (user ID) and e-mail address. You can register a username of your choice as long as it is not already in use by another user.

Password Register a password you will use to access your Google account.

1 Setting Google Account
Set Google account.
A Google account is required to use Google services such as Gmail, etc. You can set this setting from [Settings]-[Location services], too.
Tap [Set].
* If you tap [Not set], you can skip the Google account setup.

2 Add a Google Account
Do you want to add an existing account or create a new one?
Existing
New
Tap [New].
* If you already have a Google account, tap [Existing].

3 Your name
Your name is used to personalize your phone and Google services.
Taro
Kaifu
Enter your first name and last name, and then tap [Next].

4 Create email address
Create email address.
Enter your username, and then tap [Next].

5 Create password
Create password.
Enter your password, and then tap [Next].

6 Recovery information
If you ever lose your password, you can answer a security question and have a reset link emailed to a different address.
Recovery email address
Choose a security question
Answer
Enter your recovery e-mail address and a security question/answer to use if you forget your password, and then tap [Next].

7 Join Google+
Google makes sharing on the web more the real-life sharing.
Give.
The easiest way to share what matters most.
Instant Upload
Upload your all of your photos from all your devices.
Join Google+
Not now
Tap [Not now].
* To join Google+™, tap [Join Google+].

8 Finish creating account
By touching I accept below, you are agreeing to the Terms of Service and the Google and Additional privacy policies.
Back
I accept
Read the terms of service and other necessary information, and then tap [I accept].
* Tap the box to remove the checkmark if you wish to disable the web history.

9 Authenticating...
Touch the text you see here.
Back
Enter the text displayed on the screen, and then tap [Next].

10 Enable purchases
Google Play lets you buy apps right from your phone—secured by Google.
To prevent unintended purchases, you can set a PIN code in the Google Play Store.
Card number
MM / YY CC
Japan
Skip
Save
Make Google Play settings if needed, and then tap [Save].
* If you do not wish to make Google Play settings, tap [Skip].

11 Backup
Use your Google account to back up your apps, settings (such as e-mail accounts and Wi-Fi passwords), and other data.
You can change your backup settings any time in Settings.
Keep this phone backed up with my Google Account
Next
Confirm the content displayed, and then tap [Next].
* Tap the box to remove the checkmark if you do not wish to use the backup function.

If you wish to cancel setup after tapping [Set] in procedure 1 (Setting Google Account screen), tap [Home] until you return to that screen.

STEP 3: Setting to use Google's location service

Set whether to allow Google's location service to collect anonymous location data.

1 Setting Google Latitude
Google's location service uses data from sources such as Wi-Fi and mobile networks to help apps determine your approximate location, even when GPS isn't available.
You can get this setting from [Settings]-[Location services], too.
Allow Google's location service to collect anonymous location data
Tap the box to add a checkmark if you agree.

2 Setting Google Latitude
Google's location service uses data from sources such as Wi-Fi and mobile networks to help apps determine your approximate location, even when GPS isn't available.
You can get this setting from [Settings]-[Location services], too.
Allow Google's location service to collect anonymous location data
Disagree
Agree
Confirm the content displayed, and then tap [Agree].

3 Setting Google Latitude
Google's location service uses data from sources such as Wi-Fi and mobile networks to help apps determine your approximate location, even when GPS isn't available.
You can get this setting from [Settings]-[Location services], too.
Allow Google's location service to collect anonymous location data
Tap [Next].

STEP 4: au Easy Setting

au Easy Setting, an app that allows you to make setting such as au ID settings, will start up. Confirm the onscreen content, tap [Next], and make au ID settings.

① Setting au ID

Setting an au ID allows you to use "au Simple Payment Service" to purchase apps on au Market and Google Play as well as use various other services provided by au.

au ID*	Register your au phone number or a string of text to use for your au ID (user ID).
au ID password	Register a password to use your au ID.

* You cannot register an au ID already in use by another user.

1 au Easy Setting
"au Easy Setting" assist you to set up au services and functions.
Tap [Next].

2 au ID Settings
In order to use services such as "au Customer Support", "au Smart Pass", and "au Simple Payment Service", au ID must be set.
Note: Your au ID can be shown through "au ID Setting" application later.
Registration
Tap [Registration].
* Your au ID will not be set if you tap [Next].

3 au ID Setting
Pocket communication charges. Connect now?
As this application sends data over au phone network, subscription to fixed rate service for packet transmission is strongly recommended.
Don't display again.
Confirm the content displayed, and tap [OK].

4 au ID Setting
auをもっと便利に
Tap [au IDの設定・保存] (Set/Save au ID).

5 au ID Setting
au IDの設定・確認
Enter your security code and tap [OK] to confirm your identity.
* The default setting is the four-digit security code at subscription.

6 au ID Setting
au IDの設定・登録
Set an au ID password, and then tap [利用規約に同意して新規登録] (Agree to terms of service and register).

7 au ID Setting
au IDの設定が完了しました。
Now, tap [設定画面へ] (Go to setting screen) and register information need to reissue a password.

8 au ID Setting
au IDの設定が完了しました。
Enter your date of birth and secret question and answer, tap [入力完了] (Entry complete), and then tap [設定] (Set).

9 au ID Setting
au IDの設定が完了しました。
Registration of your date of birth and secret question and answer is complete. Tap [終了] (End).

- If you wish to cancel setting after tapping [Registration] in procedure 2, tap [Cancel] at the next screen or tap [Home] to return to the "Registration" screen for procedure 2.
- If you set a new au ID of your choice other than your au phone number in procedure 6 (registering a new au ID screen), register from "好きなau IDを新規登録したい方はこちら" (Registering a new au ID of your choice). If you already have an au ID, set in "au IDをお持ちの方はこちら" (If you already have an au ID). You can set an au ID later, even if you skipped setting one at time of purchase. In that case, tap [Home] on the home screen, and then tap [au Easy Setting] or [au ID Setting].

② Setting to use backup function

You can use Friends Note to automatically back up user contacts.

1 Back up Settings
To back up your address book.
Tap [Next].
* Tap [Terms and conditions (Reading Required)] first and read the terms of service.

③ Setting to use au widget

Agree to the terms of service if using au widget

1 au widget Settings
Using your location data, "au widget" automatically displays and updates information to you in the upper right corner. Please check the Terms and conditions.
accept
Tap the checkbox to add a checkmark if using this service.

2 au widget Settings
Using your location data, "au widget" automatically displays and updates information to you in the upper right corner. Please check the Terms and conditions.
accept
Tap [Next].

3 "au Easy Setting" finished
"au Easy Setting" has finished. Please enjoy various functions and services!
Don't show again
Tap [Finish].
* Add a checkmark to "Don't show again", and au Easy Setting will no longer start when you turn on the power.

Settings for Protection in Case of Loss

If you use 3LM Security, you can search for and lock the phone remotely if it is lost.

1 Google
Tap [3LM] on the home screen.

2 3LM
Tap [3LM].

3 3LM Enterprise Setup Wizard
Manage your Mobile Device
Securely access Corporate Data
Protect corporate information
Do you want to setup 3LM Enterprise Security Service or enterprise service?
For Consumer
For Enterprise
Tap [For Consumer].
Read the terms of service if they are displayed, and tap [I Accept].

4 Activate device administrator?
3LM must be allowed to manage your device.
Activating this administrator will allow the 3LM application to perform various operations.
Erase all data
Erase all data without warning.
Change the screen lock password
3LM will remove access to the screen lock password.
Set password rules
3LM will remove access to the screen lock password.
Cancel
Activate
Tap [Activate].
Follow the onscreen instructions in subsequent steps.

- Follow the procedure below to start.
Home screen → [auお客さまサポート] (au Customer Support) → [サポート&サービス] (Support & Service) → [安心セキュリティパック] (Anshin Security Pack) → [3LM Security]
- For details of 3LM Security, refer to the "Instruction Manual" app (in Japanese).

Wi-Fi® Settings

These settings allow you to use your home wireless LAN (Wi-Fi®) or a public wireless service to connect to the Internet.
* Set in a condition where you can receive signals from the access point you will connect to.

1 Google
On the home screen, tap [基本ツール] (Basic tools).

2 Google
Tap [Settings].

3 Settings
Wi-Fi
Tap [Wi-Fi].

4 Wi-Fi
To use available networks, turn Wi-Fi on.
Tap [OFF].

5 Wi-Fi
Wi-Fi® turns on, and the phone will detect available Wi-Fi® networks. When a Wi-Fi® network is detected, its network name and security settings will be displayed.

6 Wi-Fi
Tap the Wi-Fi® network to connect to.

7 Wi-Fi
Enter the password (security key), and then tap [Connect].

If using Easy Settings
You can use AOST, WPS (Push Button), or Easy Setting (HOME).
Tap [AOST], [WPS(Push Button)], or [Easy Setting(HOME)].
Follow onscreen instructions for subsequent procedures.

If selecting a detected Wi-Fi® network (for example, with an access point protected by "WEP" security)
Tap the Wi-Fi® network to connect to.
Enter the password (security key), and then tap [Connect].

If the access point you want to connect to cannot be detected or if you are setting when unable to receive signals, tap [ADD NETWORK], and then add the access point manually.

E-mail Settings

A subscription for LTE NET is required to use E-mail (@ezweb.ne.jp).
If you did not subscribe when purchasing the phone, contact an au shop or Customer Service Center.
E-mail (@ezweb.ne.jp) is a service which enables you to exchange e-mails.

■ Initial settings for your e-mail address

The initial settings screen is displayed when you first start E-mail after purchase.
Your e-mail address is determined automatically by making initial settings. You can change the e-mail address determined in initial settings.
* Be sure to make initial settings for E-mail (@ezweb.ne.jp) in Japan.



■ Changing your e-mail address

You can change the e-mail address determined in initial settings.




To confirm your current e-mail address, perform procedures 1 to 3, and then tap [E-mail information].

PC-mail settings

You can use a mail address other than one used for E-mail (@ezweb.ne.jp).
When you use PC-mail for the first time, set by the following operations.
On the home screen, tap [PC-mail] → Enter a mail address and password → [Next] → Set frequency to check the inbox → [Next] → Enter an account name and display name → [Next]
* For details, refer to the "Instruction Manual" app (in Japanese).

Backing Up E-mails

You can back up e-mails on the phone. If you have installed a microSD memory card, you can save the backup to that microSD memory card.

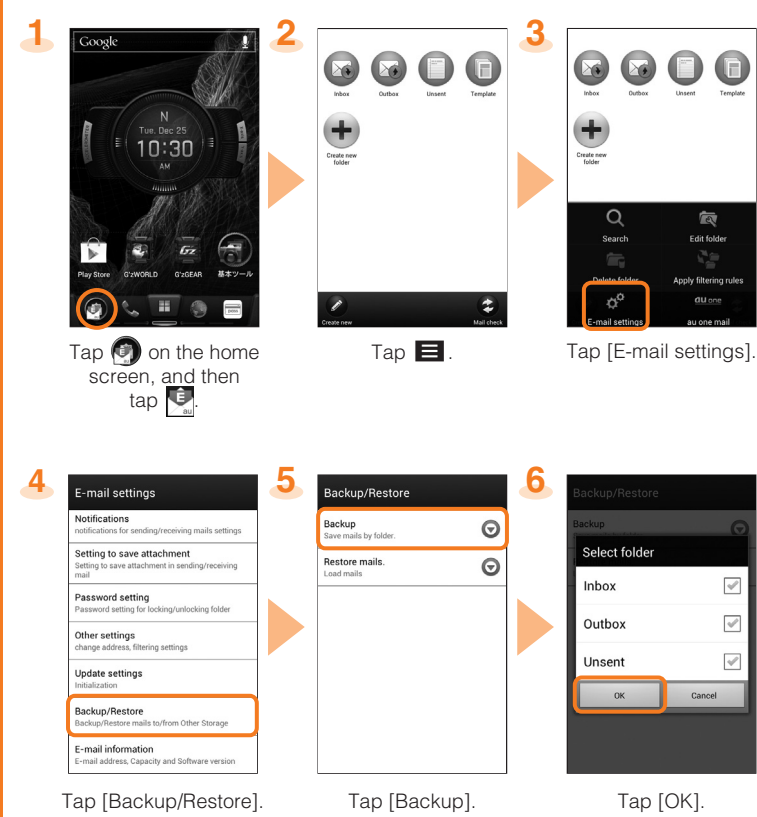


- Backed up e-mails are stored in the memory on the phone ("mnt/sdcard/private/au/email/BU" folder). If you have installed a microSD memory card, e-mails will be stored on the microSD memory card ("mnt/sdcard/external_sd/private/au/email/BU" folder).
- To import backed up e-mails, tap [Restore mails.] in procedure 5.

Importing/Exporting Contacts

■ Importing contacts


You can import to the product vCard files for contacts stored on a microSD memory card.
* Some contacts may not be importable due to issues with the vCard file. Also, some details may not be importable.

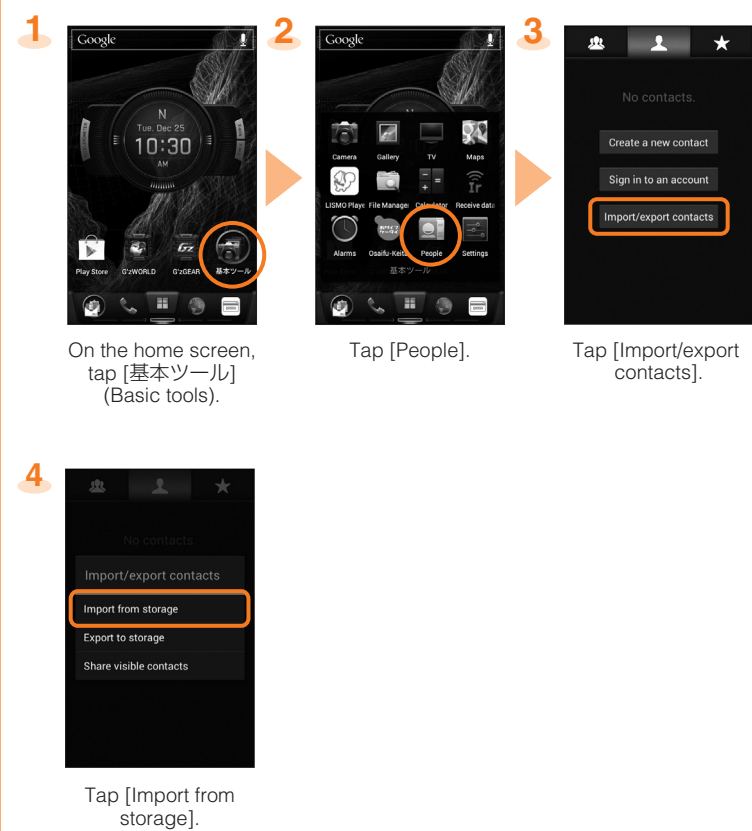

If multiple vCard files are saved on the microSD memory card, a screen to select the method of importing the vCard file will be displayed after procedure 4.

■ Exporting contacts

 
You can save your contacts to a microSD memory card as a vCard file.

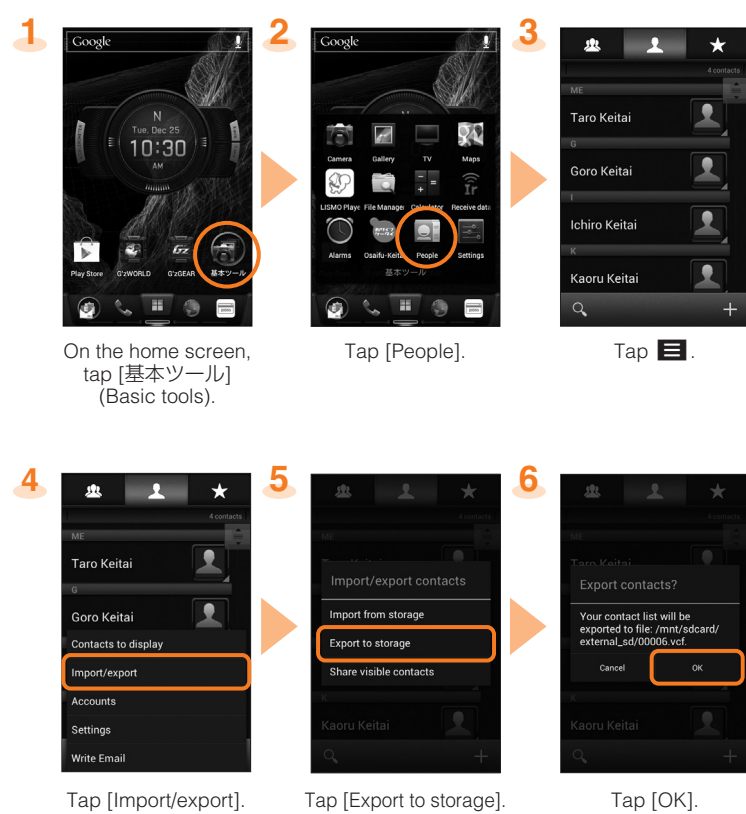

You cannot use "Import from storage" or "Export to storage" if a microSD memory card is not installed in the phone.

Making Calls

■ Calling by entering a telephone number

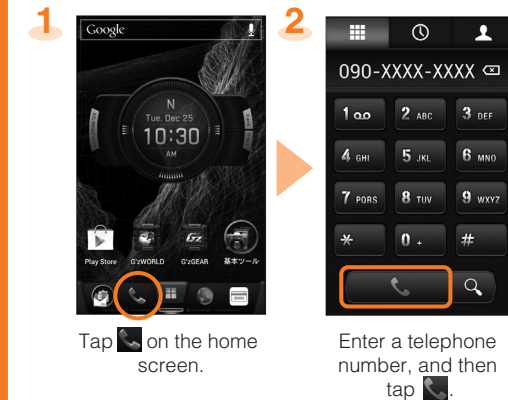

■ Calling from the call history




■ Calling someone in your contacts




Receiving Calls

■ To accept a call

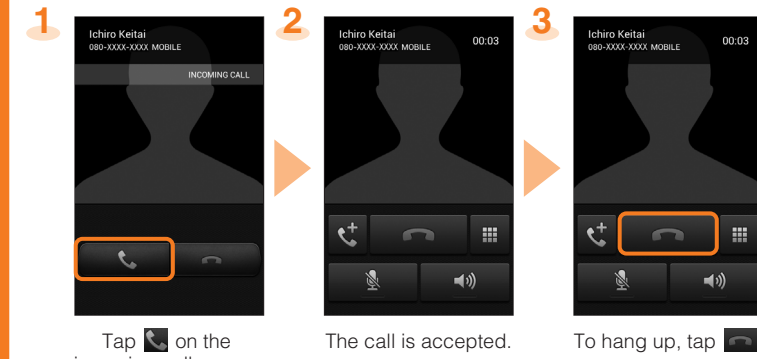


■ To reject a call

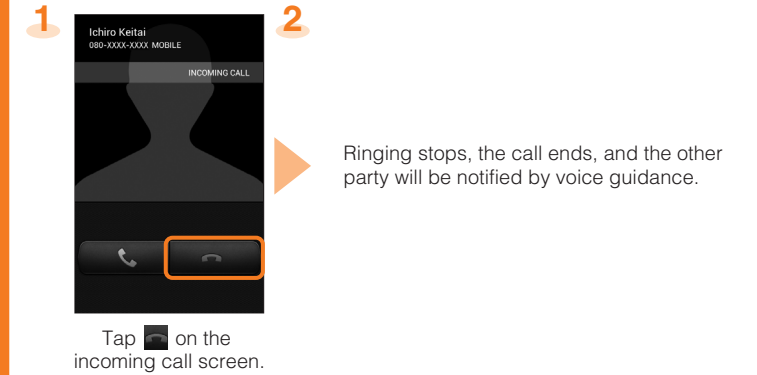 

- If you receive a call while the screen is locked, tap [Answer] on the incoming call screen twice.
- If the "Answering Service" is activated or "Forward on no-reply" is set for the Call Forwarding Service, Answering Service* or Call Forwarding Service has priority even if you attempt to reject the call.
- * Answering Service EX is a paid option service.

Infrared Communications

■ To send contacts by infrared communications

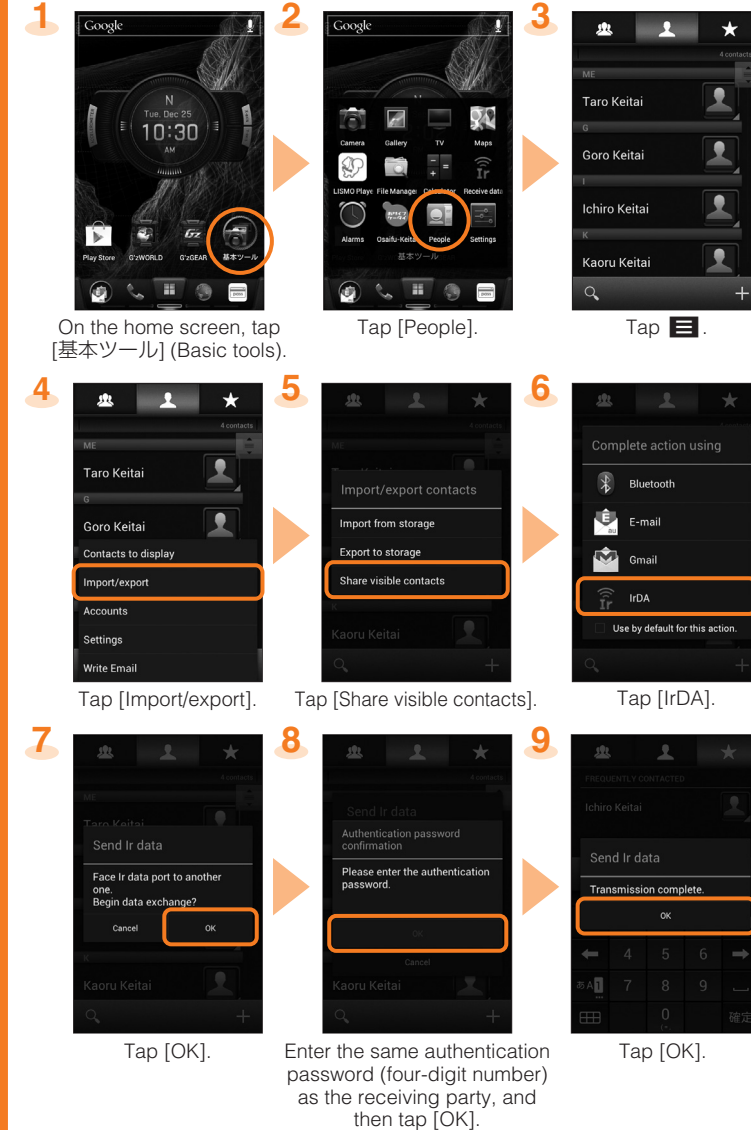

■ To receive data by infrared communications

You can receive contacts in vCard format. You can also receive images in JPEG, GIF, PNG, and WEBP formats. Still images received can be viewed in the gallery.
* Some data cannot be registered, played, or saved, even if it is received.



Infrared communications on the product complies with IrMC version 1.1. However, data may not be sent or received correctly depending on the function, even if the other device complies with IrMC version 1.1.

Saving Battery Power

Activating an eco mode can reduce battery consumption.
You can choose from the following three types of eco modes.

Auto	"Original eco mode" or "Full eco mode" will be activated according to the conditions set for "Auto" settings.
Original eco mode	Eco mode will operate according to "Original eco mode" settings.
Full eco mode	Eco mode will operate with battery consumption minimized.

